

TOSHIBA

AIR CONDITIONER (ACCESSORIES)

Operations Manual

Occupancy sensor kit

Model:

TCB-SIR41UYP-E

Thank you very much for purchasing TOSHIBA Occupancy sensor for Air Conditioner. Please read this owner's manual carefully before using your Occupancy sensor for Air Conditioner.

Request to constructor or dealer


- Please clearly explain the contents of the Operations Manual and hand over it.

Observe the safety precautions described in the Installation Manual supplied with the ceiling panel and air conditioner (indoor unit).

Configuring an Occupancy Sensor

Be sure to set operations for “Occupancy sensor operation” and “Operation during absence” as described below.

- An “Occupancy sensor” can detect whether people are present or not present.
If people are not present, the air conditioner automatically operates in an energy saving mode.

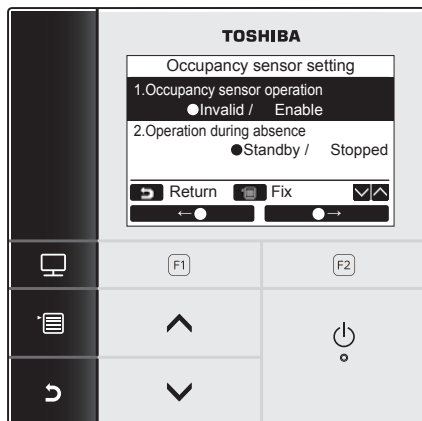

- 1 Push the [MENU] button to display the menu screen.
- 2 Push the [] / [] button to select “Occupancy sensor setting” on the menu screen, then push the “ Set ” [F2] button.

Item	Function
Occupancy sensor operation	You can decide whether to disable the occupancy sensor or select the time required to determine that people are not present. Factory default setting is 60 minutes for determining time. You can select Disable, 30 minutes, 60 minutes, 90 minutes, 120 minutes, or 150 minutes.
Operation during absence	You can select the operation of the air conditioner when people are not present. Standby: Circulation mode (thermostat OFF) Stopped: Stops the air conditioner

NOTE

If an occupancy sensor has not been connected, “ No function” is displayed.

1 Occupancy sensor operation

Occupancy sensor setting	
1.Occupancy sensor operation	Invalid / ● Enable 60 min
2.Operation during absence	● Standby / Stopped
Return	Fix
●	●

- 1 Push the [] / [] button to select “1. Occupancy sensor operation” on the “Occupancy sensor setting” screen.
- 2 Push the “ ● ← ●” [F1] / “ ● →” [F2] button to select the desired absence time.
- 3 Push the [MENU] button.
→The screen returns to the menu screen.

2 Operation during absence

Occupancy sensor setting	
1.Occupancy sensor operation	Invalid / ● Enable 60 min
2.Operation during absence	● Standby / Stopped
Return	Fix
●	●

- 1 Push the [] / [] button to select “2. Operation during absence” on the “Occupancy sensor setting” screen.
- 2 Push the “ ● ← ●” [F1] / “ ● →” [F2] button to select the desired operation.
- 3 Push the [MENU] button.
→The screen returns to the menu screen.

Toshiba Carrier (Thailand) Co., Ltd.

144 / 9 Moo 5, Bangkadi Industrial Park, Tivanon Road, Tambol Bangkadi, Amphur Muang, Pathumthani 12000, Thailand

1127699203